


Notes

- 1 Allow plus tolerance for clearance per ANSI A115.2.
- 2 Lock and latch case support by door manufacturer.
- 3 Prepare for a #8-32 screw.
- 4 Plaster guard by door manufacturer.

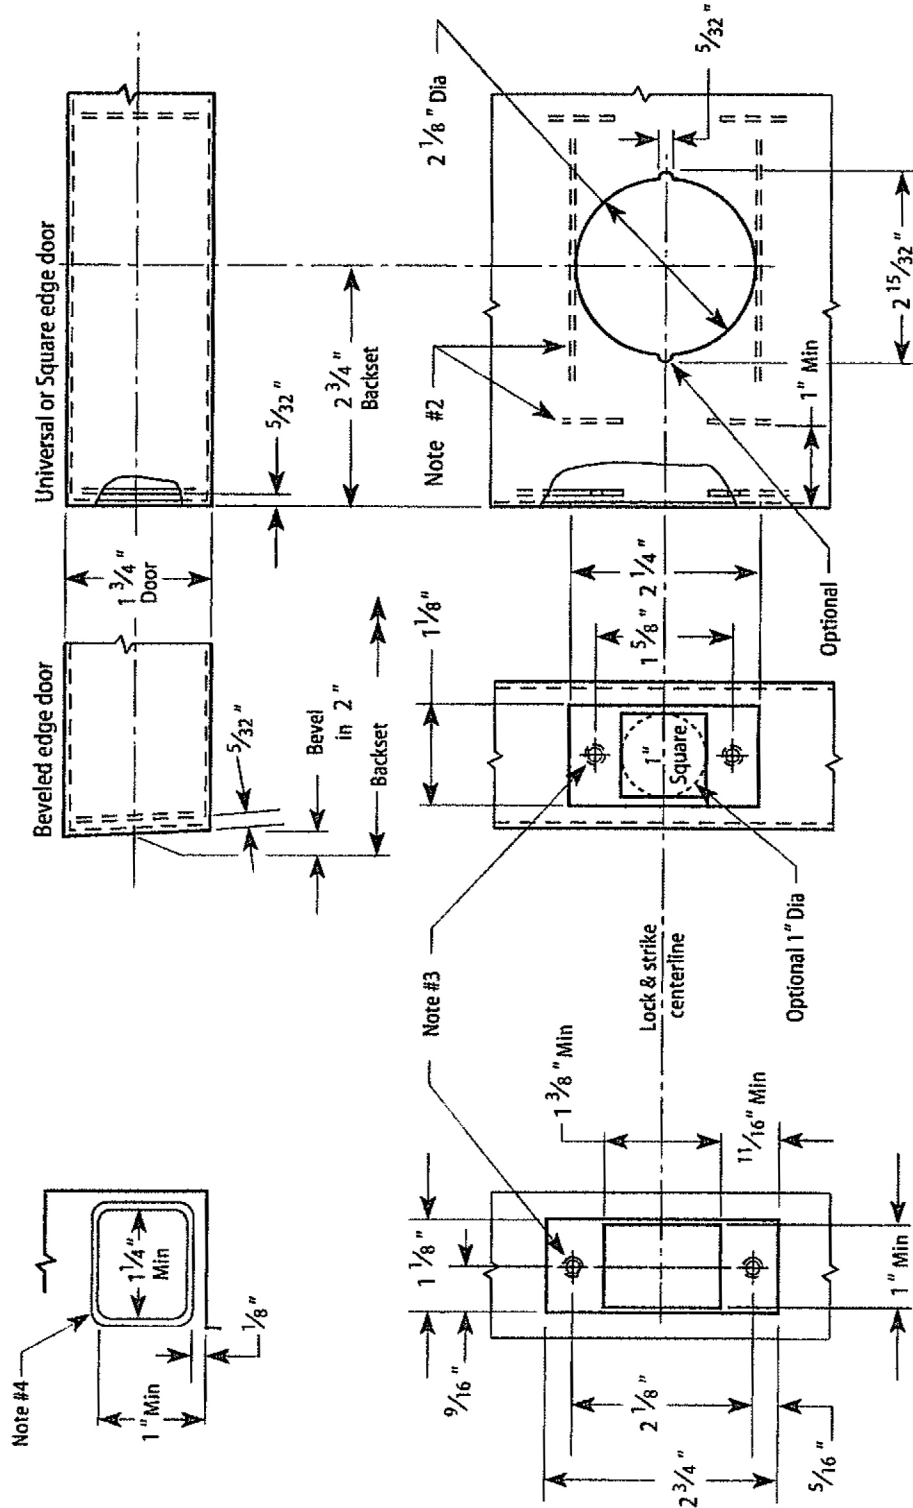

2 3/4" Backset Door Preparation

Frame Preparation

<p>Title Installation Specification Template for MBT & MBT2 Tubular Deadbolt Locks with Standard Strike</p>		
<p>Series: MBT & MBT2</p>	<p>Backset: 2 3/4"</p>	<p>Door Thickness: 1 3/8" - 2"</p>



Marshall Best Security