


# Template Q1400

## Preparation for Mortise lock

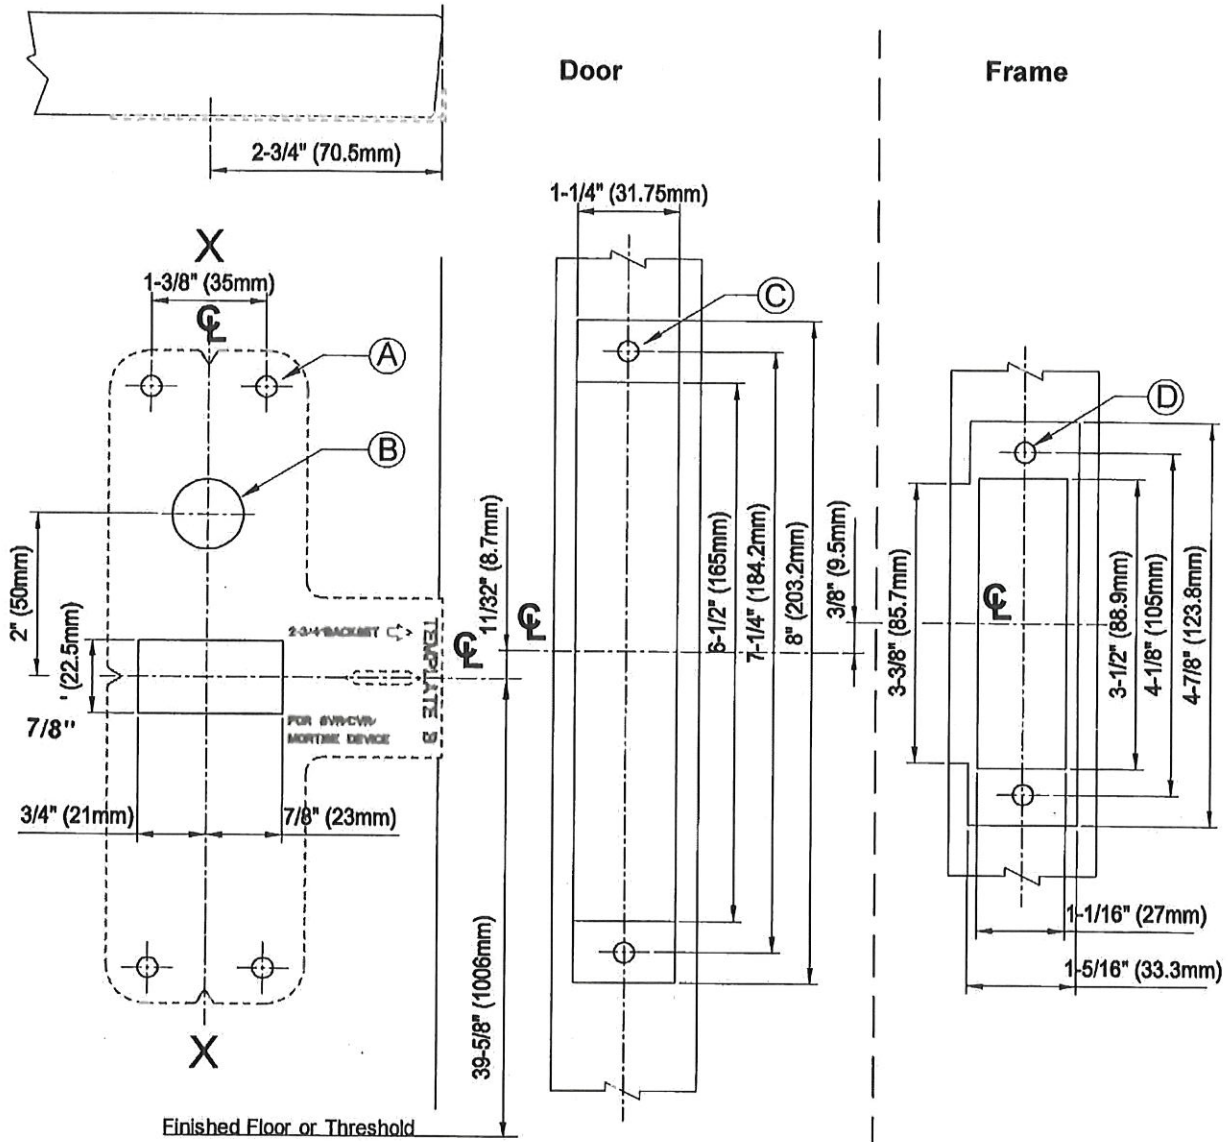

NOTATION	ILL.	APPLICATIONS	DIMENSION	
			METAL	WOOD
A	○	EXIT ONLY	#25 DRILL	3 (1/8") DRILL
		SEX BOLT OR TRIM	#10-24 TAP	PILOT 1" DEEP
B	○	DOUBLE CYLINDER	6 (1/4") DRILL (DEVICE SIDE)	10.3 (13/32") DRILL (TRIM SIDE)
			22 (7/8") DRILL (CUT DEVICE SIDE)	
C	○	MORTISE LOCK CASE	#16 DRILL	4 (5/32") DRILL
			#12-24 TAP	PILOT 1" DEEP
D	○	STRIKE	#16 DRILL	4 (5/32") DRILL
			#12-24 TAP	PILOT 1" DEEP