







# Template

## Preparation of Bottom Latch for SVR /CVR /3-PT

**BOTTOM LATCH & 225 STRIKE**

**BOTTOM LATCH & 226 STRIKE**

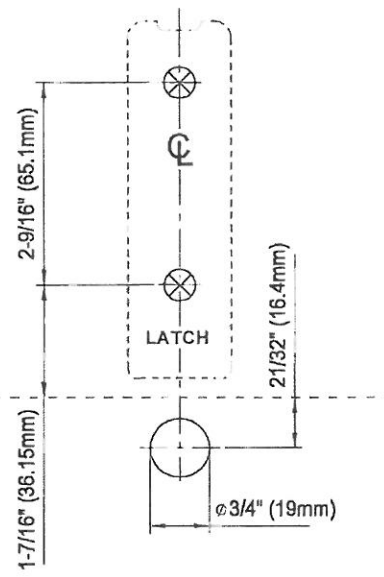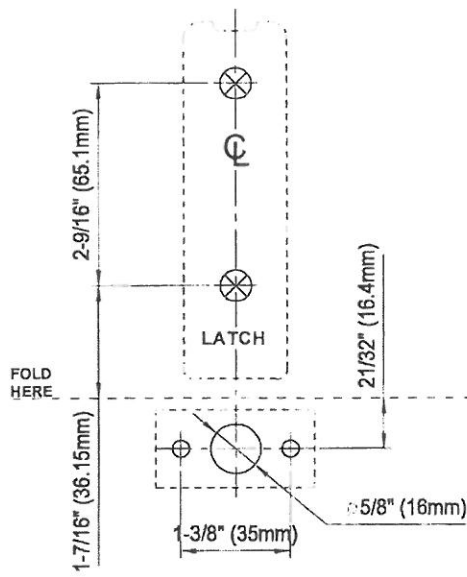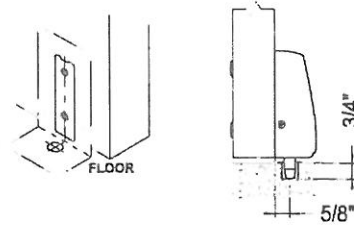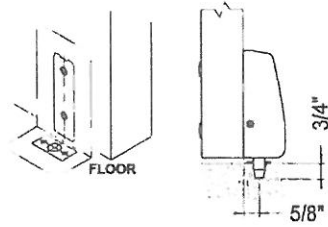

| ILL. | APPLICATIONS  | DIMENSION  |                                 |
|------|---------------|--|---------------------------------|
|      |               | METAL  | WOOD                            |
| ○    | STRIKE SCREWS | #25 DRILL<br>#10-24 TAP  | 3 (1/8") DRILL<br>PILOT 1" DEEP |
| ○    | SEX BOLT      | 8 (5/16") DRILL (DEVICE SIDE)<br>10.3 (13/32") DRILL (OUTSIDE) |                                 |