Notes

1 Allow plus tolerance for clearance per ANSI A115.2.

2 Lock and latch case support by door manufacturer.

3 Plaster guard by door manufacturer

4 Prepare for a #8–32 screw.

5 Prepare for a #12–24 screw.

8 When a strike box is used, 9/64".

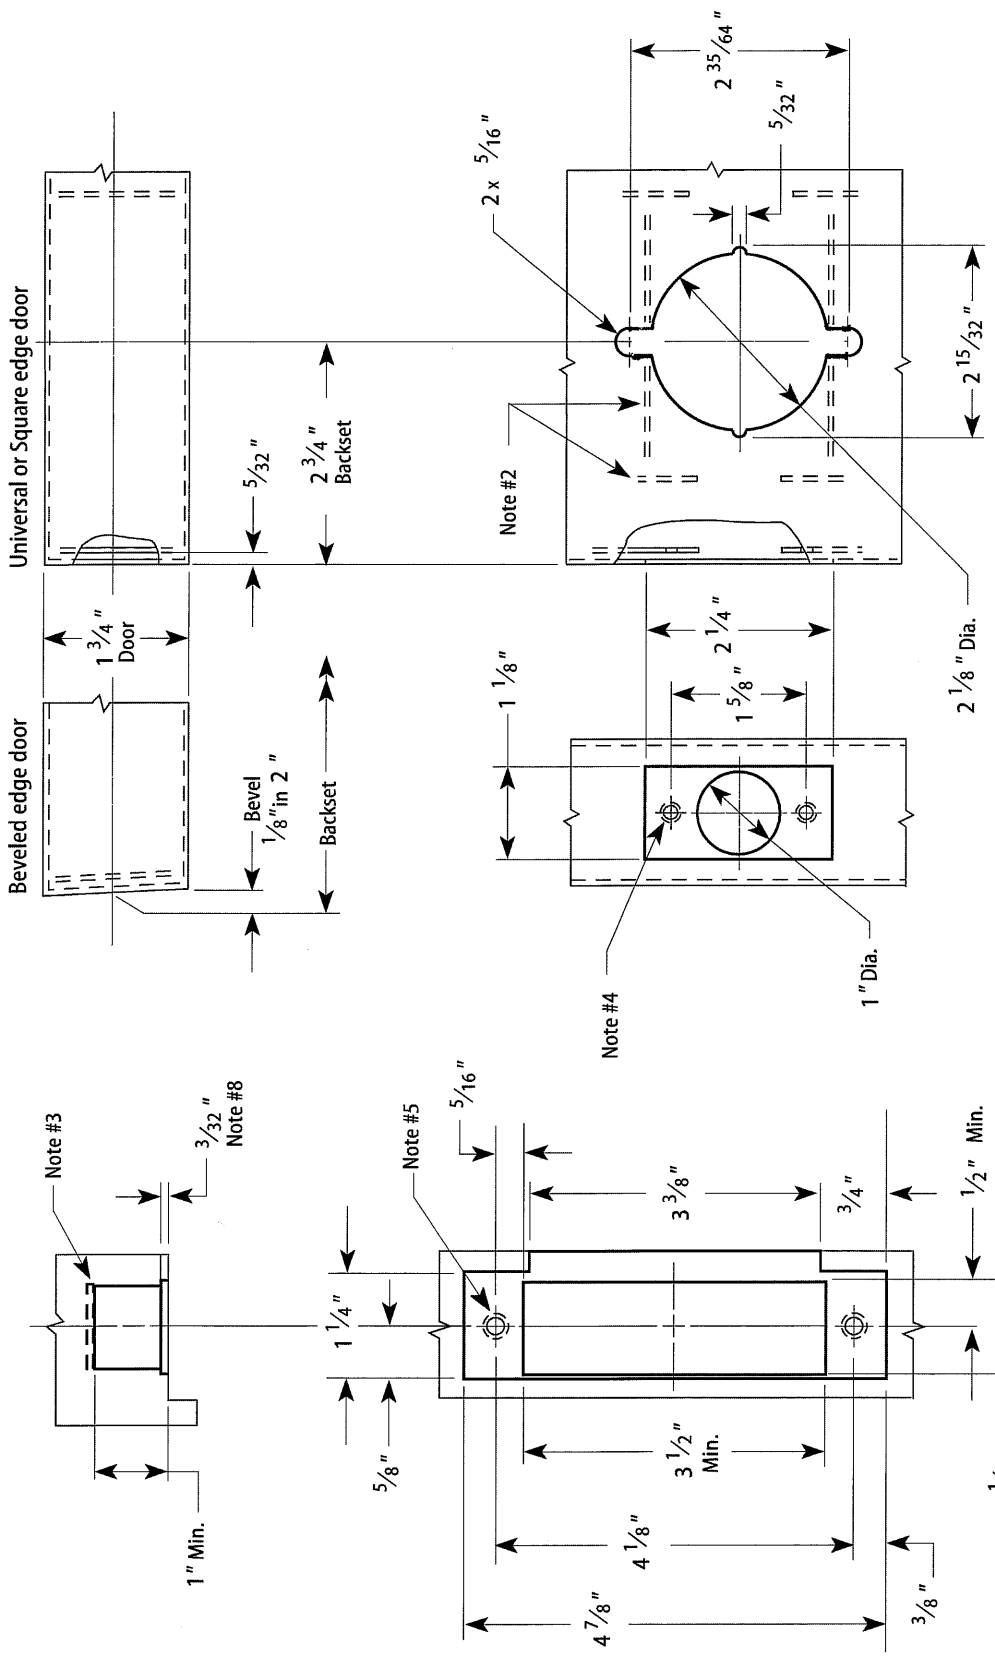

Door and Frame Preparation for MB1 and MB2 Cylindrical Locks
2-3/4" Backset, Large ANSI Strike (S1), 1-3/4" Door Thickness

Marshall Best Security Corporation