

INSTALLATION INSTRUCTIONS FOR AQ (EXIT) FUNCTION

BEFORE INSTALLATION MEASURE DOOR THICKNESS. LOCK IS PRE-ASSEMBLED FOR 1 3/4" DOOR THICKNESS. IF DOOR THICKNESS VARIES FROM 1 3/4" FOLLOW ADJUSTMENT PROCEDURE ON BACK OF PAGE.

INSTALL SECURE SIDE TRIM ASSEMBLY

- 1.) Align inside lever/rose assembly so rose posts enter thru-bolt holes in door.
- Push lock and trim assembly through 2-1/8" hole FROM SECURE SIDE of room so that retractor engages latch tail.
- 3.) Prongs must engage inside lock housing (Figure 1).
- 4.) Check from opposite side of door to ensure that latch is properly engaged.

INSTALL OUTSIDE TRIM ASSEMBLY

- 1.) Slide rose assembly over tube, passing the spring-loaded lever catch.
- 2.) Fasten rose assembly with 2 mounting screws.
- 3.) Install plastic washer(s) between both lever and rose assemblies. Washers may be added or removed as needed to eliminate excess play from lever handle (additional thin white washers are included). When determining required washer thickness, ensure the lever properly engages lever catch and does not pull off. If lever has excessive play that cannot be removed through use of washers, follow adjustment procedure outlined on back of page. The black and white washers provided are different thicknesses, it may be necessary to use multiple washers of varying thickness (ex. 1 black and 1 white washer) to achieve desired lever operation.
- Slide and push lever handle over tube until spring loaded lever catch is fully engaged.
- 5.) Check lock for proper operation before closing door.
- 6.) After lock is properly installed, adjusted and tested, remove lever on secure side and install security sleeve* on rose.
- To secure outside handle, thread in set screw using Allen wrench provided with lockset. Set screw must be flush or below surface of lever.


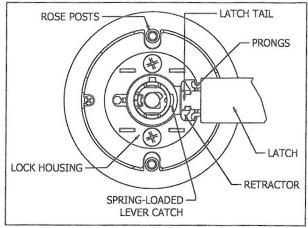


FIGURE 1

*NOTE: Once the security sleeve is installed, the lever handle <u>cannot</u> be removed. Failure to install security sleeve will result in a potential life threatening condition.




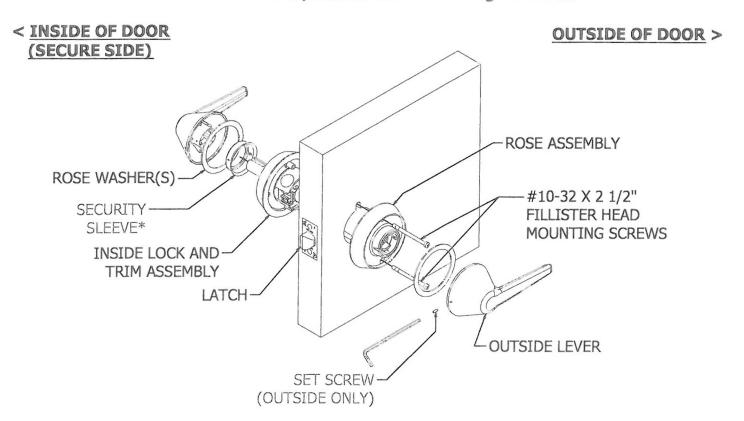


ADJUST LOCKSET

NOTE: ALL LOCKS COME PRE-ADJUSTED FOR 1 3/4" DOOR THICKNESS.

- 1.) Measure door thickness.
- The distance from the mounting surface of the threaded rose to the centerline of the latch retractor <u>must be</u> equal to 1/2 door thickness (see Figure 2). [ex. for 1.750" door, distance to latch retractor centerline = 0.875"]
- Remove lever from secure side.
- 4.) While depressing spring-loaded lever catch, rotate rose (in or out) to adjust for door thickness NOTE: 1/2 rotation (180°) will move rose in/out by 0.020", 1 full rotation will move in/out 0.040"
- 5.) Follow instructions on reverse of page to complete lock set installation.

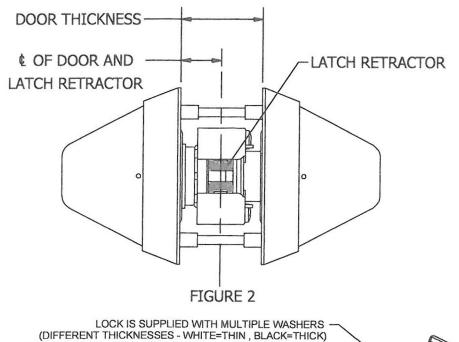

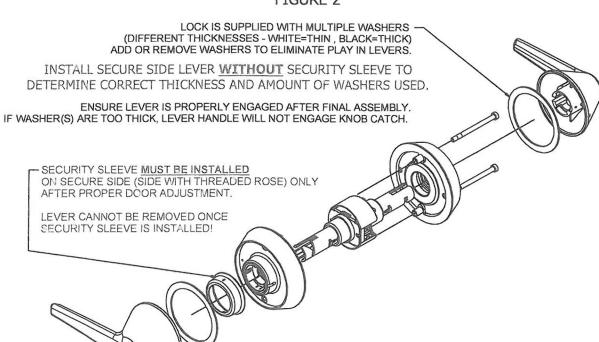

SECURE SIDE